

Programming Options

MODE 1

* INDICATES DEFAULT SETTING

FUNCTION 1 – Ignition-controlled Door Locks

OPTION 1* Ignition lock disabled

OPTION 2Ignition lock enabled

OPTION 3Ignition unlock only

OPTION 4Ignition lock only

FUNCTION 2 – Secure Lock

OPTION 1* Secure lock disabled (1-sec. disarm pulse)

OPTION 2Secure lock enabled in smart mode

OPTION 3Secure lock disabled (1/2-sec. disarm pulse)

OPTION 4Secure lock enabled in standard mode

FUNCTION 3 – Door lock pulse timing

OPTION 1* 7/10-sec. lock/unlock pulses

OPTION 24-sec. lock/unlock pulses

OPTION 37/10-sec. lock pulse & two 1/4-sec. unlock pulses

OPTION 41/10-sec. lock/unlock pulses

FUNCTION 4 – AUX 3 Programming

OPTION 1* Constant output while the TRUNK button is pressed

OPTION 21-sec. output when TRUNK button is pressed for 3 sec. with ignition off or under remote run

OPTION 3Output with disarm and rearm pulses (the alarm is disarmed while the trunk is open; the alarm rearms automatically afterward)

OPTION 41-sec. output when TRUNK button is pressed for 3 sec. with ignition off or under remote run

FUNCTION 5 – AUX 2 Programming

OPTION 1* priority door access on 1st unlock with unlocking of all doors on each subsequent unlock; with car finder

OPTION 2Toggle ON/OFF (with 30-second timeout)

OPTION 3Constant output while pressing the FUNCTION button followed by the LOCK button

OPTION 4Priority door access on 1st unlock and on each subsequent odd unlock with unlocking of all doors on each subsequent even unlock; with car finder

MODE 2

* INDICATES DEFAULT SETTING

FUNCTION 1 – Home Valet™

OPTION 1Home valet enabled

OPTION 2* Home valet disabled

OPTION 3Home valet disabled

FUNCTION 2 – Safe Start.

OPTION 1Safe Start enabled

OPTION 2* Safe Start disabled

OPTION 3“Swap Start” – enhanced safe start mode with extended safety: To start the engine: press the FUNCTION button followed by the LOCK button. To trigger AUX 2: press the START/STOP button

FUNCTION 3 – Engine Run Time

OPTION 1Run time = 4 minutes in gas mode / 9 minutes diesel mode

OPTION 2* Run time = 15 minutes in gas mode / 20 minutes diesel mode

OPTION 3Run time = 25 minutes in gas mode / 30 minutes diesel mode

FUNCTION 4 – Idle/Turbo Mode

OPTION 1Idle/turbo mode disabled

OPTION 2* Idle/turbo mode enabled

OPTION 3Idle/turbo mode disabled

FUNCTION 5 – Engine type and Cold Weather Mode

OPTION 1Diesel mode with 20-minute run time in cold weather mode

OPTION 2* Gas mode with 4-minute run time in cold weather mode

OPTION 3Diesel mode with 9-minute run time in cold weather mode

MODE 3

* INDICATES DEFAULT SETTING

FUNCTION 1 – Siren (or Horn) Chirps

OPTION 1Warning chirps

OPTION 2* Full chirps enabled

OPTION 3Chirps enabled with open zone notification (Siren warning 10 sec. after arming if a door is left open) with lock confirmation when the LOCK button is pressed for a 2nd time

OPTION 4Chirps disabled with Lock Confirmation when the LOCK button is pressed for a 2nd time

FUNCTION 2 – Passive or Active Arming

OPTION 1ACTIVE Arming.

OPTION 2* Passive arming (30 sec.)

OPTION 3Passive arming (30 sec.), no siren mute

OPTION 4Disarmed notification enabled (chirp if a door is left open)

FUNCTION 3 – Siren Mode / Horn Mode

OPTION 1Siren disabled

OPTION 2* Siren enabled

OPTION 3Horn disabled
Features

OPTION 4Horn enabled

FUNCTION 4 – Shock Sense / Warn-away

OPTION 1Shock Sense ignored / Warn-away ignored

OPTION 2* Shock Sense monitored / Warn-away monitored

OPTION 3Shock Sense monitored / Warn-away ignored

OPTION 4Shock Sense ignored / Warn-away monitored

FUNCTION 5 – Ignition Valet

OPTION 1Ignition Valet disabled

OPTION 2* Ignition Valet enabled

OPTION 3Ignition Valet enabled

MODE 4

* INDICATES DEFAULT SETTING

FUNCTION 1 – Multi-Level Features



OPTION 1Multi-car Features, Basic Features, Customized Features

OPTION 2* Basic Features, Multi-car Features, Customized Features


OPTION 3Customized Features, Multi-car Features, Basic Features

OPTION 4Basic Features, Customized Features, Multi-car





WIRING SCHEMATIC

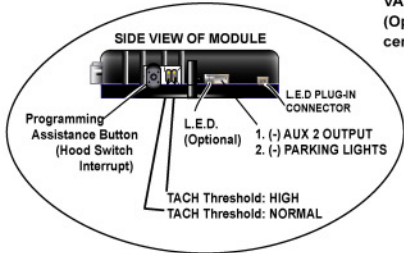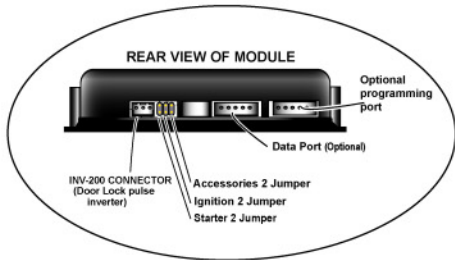

PUSH-BUTTON VALET SWITCH (Optional on certain models)

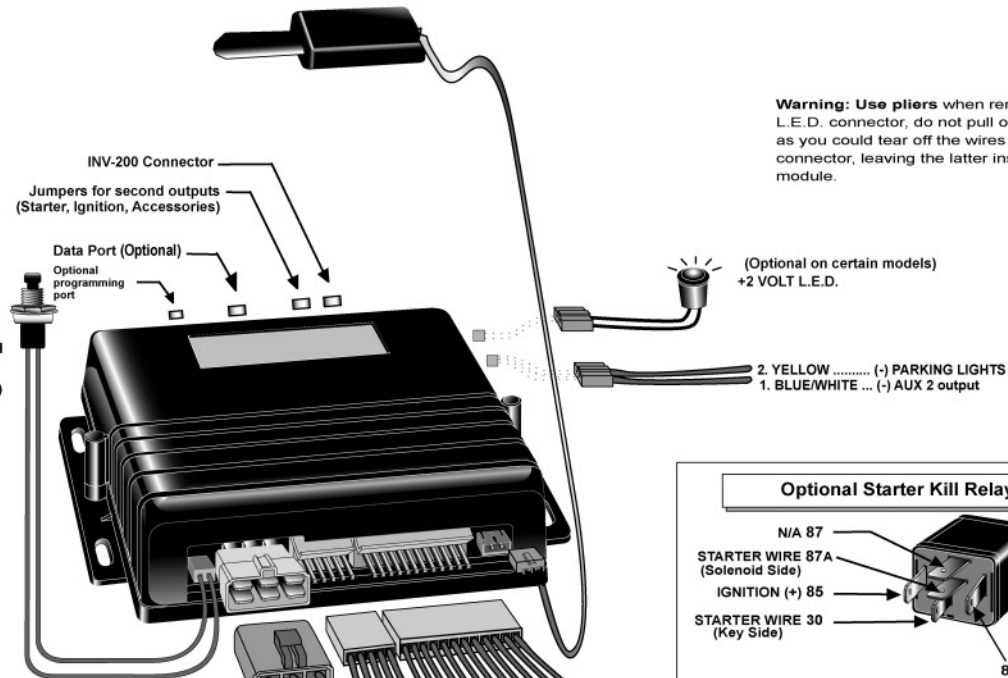

Warning: Use pliers when removing the L.E.D. connector, do not pull out the cord as you could tear off the wires from the connector, leaving the latter inside the module.

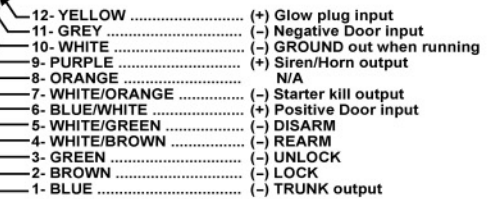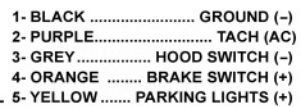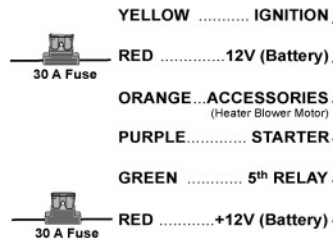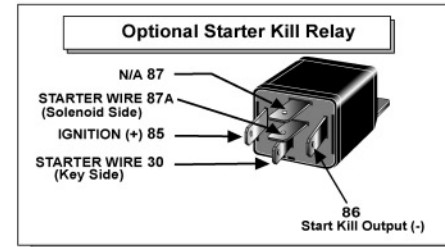

Sept. 02, 2005